





*Sensor Products International srl, Italy
Via Bruno Buozzi 25 Castel Maggiore (BO)*

Tactilus 10 Quick Start Manual

1. Install DataPort software using file “Tactilus_DataPort_Setup_1.02.002.exe”
2. After installation run DataPort Scan in the bottom right corner of windows desktop interface, right click on Tactilus icon and click on start

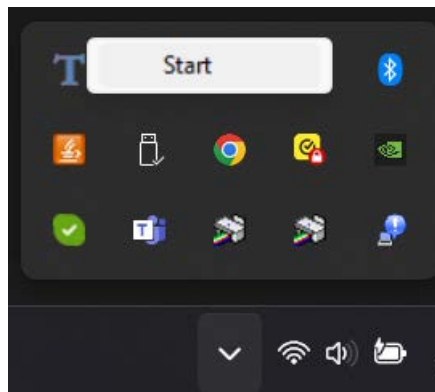


3. Open TS 10 , click on file -> new session

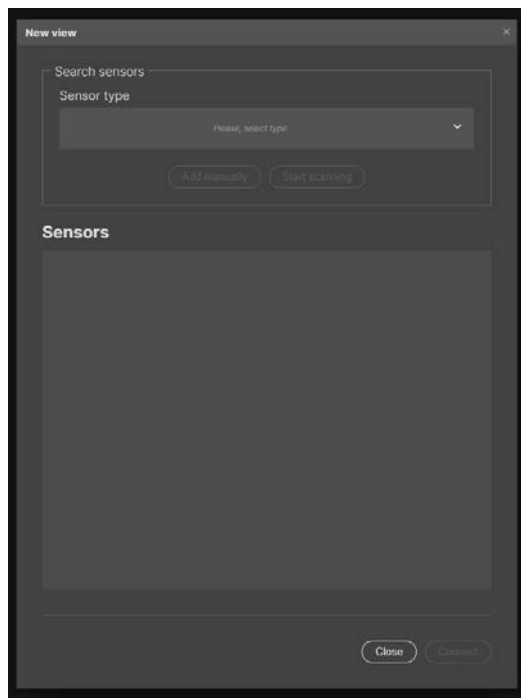





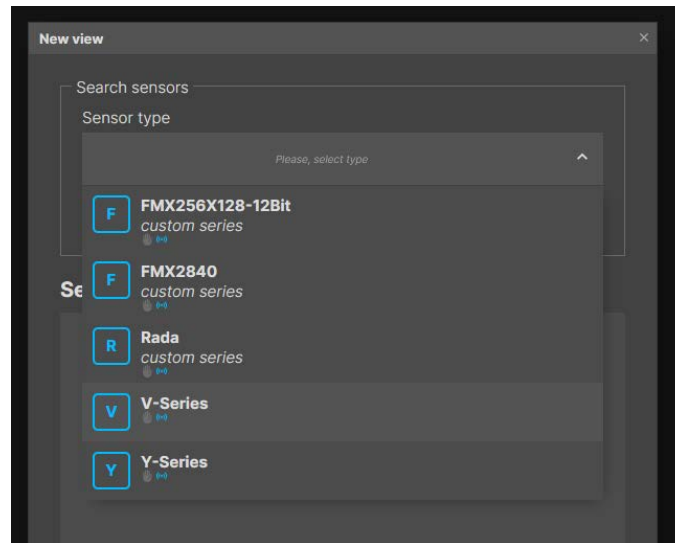


Sensor Products International srl, Italy
Via Bruno Buozzi 25 Castel Maggiore (BO)

4. Under Sensor type select your device from the list



5. Select your sensor in the sensor list and click on connect
6. To begin recording a session, click on the record button .
7. Begin applying pressure to the device. To save the session click on the pause icon  and then click on the Save Project As... icon  or go to "File" and then "Save Project As..." (See Note 1)
8. To close the project, click on the Close Project icon . This will return the software to step 3. From here the software can be closed by clicking the X icon  in the top right corner of the Tactilus window.